

***TRAMEX***®

***MRH III***

Non-Destructive Moisture  
&  
Humidity Meter

USER GUIDE

MRH0510

# **MRH III User Guide**

## **TRAMEX MOISTURE/HUMIDITY INSTRUMENTS**

**SURVEY ENCOUNTER:** The intelligent moisture meter.  
"State of the art" non-destructive moisture meter for measurement and data logging of moisture in building materials.

### **MOISTURE ENCOUNTER PLUS**

General purpose non-destructive moisture meter employing advanced analog and digital technology.

### **CONCRETE ENCOUNTER CME 4**

Non-destructive moisture meter for concrete floors.

### **CRH FLOORING**

Non-destructive testing and data logging of moisture content and relative humidity measurements in concrete (*to ASTM F 2170, ASTM F 2420, BS 5325 & 8203*), gypsum screeds and sub-floors.

### **CMEXPERT FLOORING INSPECTION KIT**

Complete kit for moisture testing of concrete, hardwood flooring and sub-flooring. Can also be used for relative humidity testing of flooring by either the in-situ probe method (ASTM F 2170) or the RH hood method (ASTM F 2420, BS 5325 and 8203).

### **PROFESSIONAL MOISTURE METER**

Digital resistance meter with probes, tests deep into wood.

### **COMPACT MOISTURE METER**

Economical pin-type resistance meter for wood.

### **SKIPPER PLUS**

Checks wooden boats for decay and finds osmosis in GRP.

### **DEC SCANNER**

Mobile non-destructive surveying of flat roofs.

### **WET WALL DETECTOR**

Non-destructive moisture evaluation and tracing in EIFS.

### **RWS ROOF AND WALL SCANNER.**

For moisture scanning and leak tracing on roofing, EIFS and the building envelope.

### **MOISTURE & HUMIDITY INSPECTION KITS ARE AVAILABLE FOR THE FOLLOWING INDUSTRIES:**

Floor inspection / EIFS wall inspection / Roof inspection / Indoor Air Quality / Water damage restoration.

## ***MRH III User Guide***

### **TABLE OF CONTENTS**

<b>Introduction .....</b>	<b>4</b>
<b>How it works .....</b>	<b>4</b>
<b>Instrument Features .....</b>	<b>6</b>
<b>Operating Instructions .....</b>	<b>8</b>
<b>Non-destructive measurement mode.....</b>	<b>9</b>
<b>Wood pin meter mode .....</b>	<b>10</b>
<b>Typical MRH Displays .....</b>	<b>12</b>
<b>Humidity measurement mode .....</b>	<b>14</b>
<b>Working with your MRH.....</b>	<b>14</b>
Roof Scale.....	14
Masonry Scale .....	15
Drywall Scale .....	16
Laminate Scale.....	17
Wood Scale .....	17
<b>Wood Pin Meter Mode .....</b>	<b>24</b>
Species Adjustment .....	28
<b>RH Probe.....</b>	<b>40</b>
Calibration .....	41
<b>Warranty.....</b>	<b>42</b>

# MRH III User Guide

## Introduction

Thank you for selecting a new **MRH** instrument from Tramex.

### **The MRH has 3 modes of operation:**

1: The **MRH** utilises “state of the art” electronic technology to provide you with an accurate and easy to use non-invasive instrument for non-destructive testing (NDT) of Moisture Content (MC) and tracing moisture in a wide range of building materials.

2: By inserting one of the optional plug-in electrodes for wood and selecting Pin Probe the instrument can then be used in Pin Probe (wood pin-meter resistance measurement) Mode. **This enables the MRH to measure the percentage moisture content (%m.c.) of wood and give an indication of the moisture content of wood-based products.**

3: By inserting the optional plug-in RH-probe, the instrument automatically changes to hygrometer mode. **This enables the MRH to measure relative humidity (RH), temperature, dew-point temperature and mixing ratio of the environment or equilibrium relative humidity in a structural material.** A structural material such as a concrete slab can be tested using the in-situ (ASTM F2170) or RH Hood (ASTM F2420) methods and British standards BS 5325 and BS 8203.


## How it works

In non-destructive moisture measurement mode i.e. without the plug in probes, the instrument operates on the principle that the electrical impedance of a material varies with its moisture content. The electrical impedance is

## MRH III User Guide

measured by creating a low frequency alternating electric field between the electrodes as illustrated in Figure 1 below.

This field penetrates the material under test. The very small alternating current flowing through the field is inversely proportional to the impedance of the material. The instrument detects this current, determines its amplitude and thus derives the moisture value.

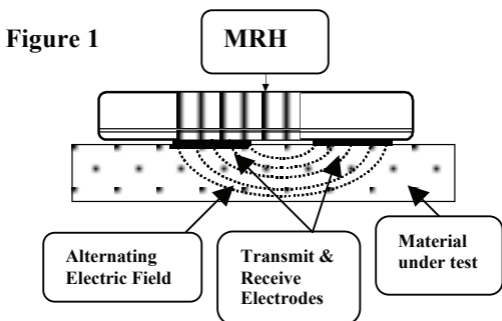










In **Pin Probe Mode** (i.e. with pin probe mode selected and an electrode plugged in), the **MRH** is a resistance type pin meter for determining the percentage moisture content of wood.

In **Hygrometer mode** (i.e. with the RH Probe plugged in), the **MRH** determines the capacitance of the RH probe sensor, which varies with the relative humidity of the test area environment. The **MRH** displays this capacitance as percentage relative humidity (%RH). It also measures temperature and displays dew-point temperature and mixing ratio.

## MRH III User Guide

### Instrument Features

Your MRH employs advanced digital technology to enable the incorporation of many features, which are listed below.




- 3 modes of measurement: Non-destructive moisture measurement, hygrometer and wood pin probe.
- 6 simple membrane keypad controls:
  - ◆ **ON/OFF** 
  - ◆ **SCALE** 
  - ◆ **UP** 
  - ◆ **DOWN** 
  - ◆ **HOLD/AUDIO** 
  - ◆ **BACKLIGHT** 
- 5 Scales: Wood, Roof, Masonry, Drywall and Laminate. These are selected using the  key and the  or  keys.
- Moisture readings and scale are displayed on a clear easy to read liquid crystal display (LCD).
- Relative Humidity (RH) readings, probe temperature, dew-point temperature and mixing ratio are automatically displayed when the RH Probe is plugged into the MRH (**Hygrometer Mode**).
- The Roof, Masonry, Drywall and Laminate Scales use a reference/comparative scale that is displayed both numerically (0-99) and in a bar form on the bottom line of the display. The display also shows low (LO), medium (MD) and high (HI) readings for these scales.

**These do not necessarily indicate low, medium or high levels of moisture but indicate the area of the 0-100 comparative scale where the reading lies.**

Example


L	A	M	I	N	A	T	E					M	D	3	3
LO		31				MD		70		71		HI		99	
0	-	30													

### **MRH III User Guide**

- To conserve battery life, the instrument automatically powers OFF after 10 minutes of inactivity or when the  key is pressed. If a key is pressed the power off will be extended for an additional ten minutes.
- Backlit display allows the display to be easily read in poor light conditions. This is enabled by pressing the  key. The backlight stays on for a period of 30 seconds.
- When the battery requires replacement a LOW BATTERY message is shown on the LCD.
- **HOLD**  freezes reading to facilitate ease of recording readings. When the **MRH** is in HOLD mode, 'H' will flash on the display.
- If **HOLD** was selected prior to the **MRH** automatically powering off, the frozen display reading is digitally memorized and restored next time ON is selected.

# MRH III User Guide

## Operating Instructions

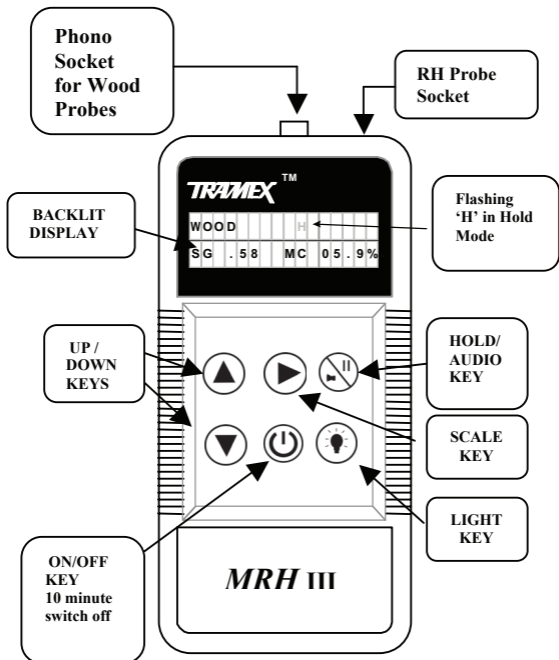








**Figure 2**

A diagram of the instrument face with brief notes on the push button controls and LCD is shown above (Figure 2).






## **MRH III User Guide**

### **Non-destructive measurement mode**


1. Press the  key to power up. With no RH probe or pin probe connected the last used scale will be displayed on the LCD. Press  key again to power off.
2. To change scale, press  key to select the wood scale or the comparative material scales. Select the required material scale using the  or  key.
3. Hold your **MRH** directly on the wood, roof, masonry, drywall or other material being tested, ensuring both conductive-rubber electrodes are fully in contact with the surface.
4. For the Roof, Masonry, Drywall and Laminate scales the readings are comparative from 0 to 99. A visual indication is also given by the bar display on the bottom line of the LCD. The display also shows low (LO), medium (MD) and high (HI) readings for these scales. LO is displayed for readings from 0 to 30, MD for readings from 31 to 70 and HI for readings from 71 to 99. **These do not necessarily indicate low, medium or high levels of moisture but indicate the area of the 0-100 comparative scale where the reading lies.**
5. The readings on these scales are not to be interpreted as a measurement of percentage moisture content (% MC) or relative humidity (RH). It is not a relative humidity reading and it does not have any linear correlation with Relative Humidity measurements. This scale should be regarded as a comparative or qualitative scale only.
6. When the **Wood Scale** is selected the moisture content (MC) in percent of wood is shown on the right-hand side of the bottom line of the display. The left-hand side of this line shows the specific gravity (SG) being used. The SG is changed by using the  or  key to adjust to the required SG value. The range of SG covered is 0.30 to 0.80. The S.G. increases and decreases in increments of 0.01
7. A chart showing the approximate specific gravity of a wide range of different species is shown on pages 22

## **MRH III User Guide**

and 23. For SG greater than 0.80 please refer to species adjustment table (Table 2 on Page 20).

8. To turn audio tone on or off, press  key twice in quick succession.
9. The **MRH** will automatically power-off after ten minutes if no key is pressed. If a key is pressed the power-off will be extended for an additional ten minutes.
10. To freeze readings press the  key once. While on HOLD, H will flash slowly on the upper line of the display. If the unit powers OFF while on HOLD, the frozen meter reading is digitally memorized and restored next time ON is selected. To remove freeze, press  key again.

### **Wood pin meter (Pin Probe) mode**

This mode is activated by plugging one of the optional Wood Electrodes into the socket at the top of the instrument and selecting Pin Probe using the  key. In pin probe mode the **MRH** works on the principle of electrical resistance. When the electrode pins are pressed or driven into the wood, the electrical resistance between the electrodes is measured and indicated on the digital display. If the wood is dry, the resistance is very high. The higher the moisture content, the lower the resistance. This resistance is accurately measured by the instrument, which translates it into percentage moisture content for wood. The **MRH** gives moisture readings from 7% to 40%. It should be noted that readings above 27% (nominal value of the fibre-saturation point) are indicative only.

## **MRH III User Guide**

### **Wood Pin Meter Mode Vs. Non-Destructive Measurement Mode**

The two main types of moisture meter for measuring moisture content in wood are the pin type meter and the non-destructive or impedance type meter. Both types are calibrated using gravimetric or oven-drying test methods.

**The Tramex MRH combines both of the above methods in one instrument so it is important to understand how each test method works as the results from the two tests may sometimes be different and appear to be contradictory.**

The **pin type meter** measures the resistance between two pins, which are inserted into the timber. The standard calibration for this type of meter is based on a Douglas Fir with a specific gravity (S.G.) of 0.5.

The impedance or **non-destructive type meter** has two electrodes, which transmit a low frequency signal into the timber up to a maximum depth of 1¼" (30mm). This meter takes an average reading over a much larger area but the S.G. of the material being tested affects the reading more.

On the MRH non-destructive test it is possible to adjust the specific gravity for better species-dependant readings if the material is of sufficient thickness. If the SG of the material is not known it is possible to use the readings from the pin meter to give an approximation of the SG for the non-destructive meter. This is done by Adjusting the SG on the non invasive test until both tests give approximately the same reading. This is not as accurate as knowing the exact S.G. of the material but can be a good indication.

It is very important to note that the readings of the non-destructive meter will penetrate up to 1¼" (30mm) into the material being tested. If the material is less than 1¼" (30mm) thick it is possible to get false readings from another material in contact with it. A typical example of this would be a laminate floor over concrete.

## MRH III User Guide

### Typical MRH Displays

#### Moisture Measurement Mode

R	O	O	F							M	D	4	7

M	A	S	O	N	R	Y				L	O		3

D	R	Y	W	A	L	L				H	I	7	1

W	O	O	D											
S	G		.	6	0			M	C	1	1	.	2	%

L	A	M	I	N	A	T	E				M	D	3	3

#### Battery warning

		L	o	w	B	a	t	t	e	r	y		

## MRH III User Guide

### Humidity Probe Display

#### METRIC

Flashing 'H' in Hold mode

Relative Humidity

T °C

R	H	5	0	.	1	%	H	T	2	0	C		
T	d	1	1	.	7	C	0	0	0	7	g	m	s

Dewpoint (Td) °C

Mixing Ratio g/kg

#### IMPERIAL

R	H	5	0	.	1	%	H	T	6	8	F		
T	d	5	3	.	1	F	0	0	5	1	G	R	N

### Wood Pin Probe Display

P	I	N												
P	R	O	B	E			M	C	=	1	0	.	8	%

Moisture Content

## **MRH III User Guide**

### **Humidity measurement mode**

The optional Relative Humidity (RH) Probe can be plugged into the socket at the top of the instrument. The display shows relative humidity (RH), temperature (T), dew-point temperature (Td) and mixing ratio in grains/lb (GRN) or g/kg (gms). When the RH Probe is plugged into the **MRH**, the ▲ or ▼ key is used for changing the temperature between °C and °F and the mixing ratio between g/kg and grains/lb.

### **Working with your MRH**

#### **Comparative Material Scales**

The MRH has 4 comparative material scales: Roof, Masonry, Drywall and Laminated. The comparative material scales are selected using the ▶ key and switching between the various scales using ▲ or ▼ key.

#### **Roof Scale**

##### **Roof Testing**

- a) The presence of moisture in built-up roofs covered with multi-ply roofing felt, PVC, modified bitumen and all non-conductive membranes (See Limitations Section), can cause blistering and splitting of the roof covering. In addition moisture can cause considerable damage to the contents and fabric of the building as well as heat loss through wet insulation. Your **MRH** can be used to confirm a new roof has been installed dry and help trace leaks.
- b) If the waterproofing membrane develops a leak, the water can travel within the built-up-roof structure and

### **MRH III User Guide**

enter the building some distance away. Testing the membrane surface and comparing the dry areas with areas where moisture is present below the surface can assist in tracing such a leak to its source.

- c) As there are many different types and thickness sizes of roofing membranes, it is not possible to give a calibrated percentage measurement. Instead, a comparative scale is displayed both numerically, (0 to 99) and in a bar form on the bottom line of the display. The display also shows low (Lo), medium (Md) and high (Hi) readings for the scale.

**These do not necessarily indicate low, medium or high levels of moisture but indicate the area of the 0-100 comparative scale where the reading lies.**

- d) If gravel surfacing is present, this should be removed to ensure your **MRH** comes into direct contact with the surface of the membrane.
- e) It is recommended that a core be cut to determine the depth and density of the moisture before carrying out roof repairs. Alternatively, the area can be checked with a resistance-type moisture meter with insulated pins up to a length of 7"(180mm).

### **Masonry Scale**

#### **Testing plaster, brick and block**

Your **MRH** gives comparative (relative) readings (0 to 99) on plaster, brick and block. These readings are displayed both numerically and in bar form on the LCD. The display also shows low (Lo), medium (Md) and high (Hi) readings for the scale.

**These do not necessarily indicate low, medium or high levels of moisture but indicate the area of the 0-100 comparative scale where the reading lies.**

For plaster, brick and block use the **Masonry** scale. For **Drywall** the more sensitive dedicated **Drywall** scale is used. Always press the electrodes firmly against the surface.

The moisture profile of a masonry wall can be determined by moving your **MRH** across the surface where it will read through most paints and wall coverings.

It will help identify the different levels of moisture even if not apparent on the surface. Moisture can often be trapped behind wall coverings.

## ***MRH III User Guide***

Rising damp and moisture migration from leaks and defective, or non-existent, vapor barriers can be identified and profiled and often its source identified by moving the instrument across the wall surface.

Water damage following flooding or fire fighting can be checked and the drying out and de-humidification process can be monitored.

### **Drywall Scale**

Because of its deep signal penetration, your **MRH** can identify excess moisture behind drywall, ceramic tile and other wall coverings when used on the **Drywall Scale**.

### **Testing on ceramic tiles, other wall and floor coverings.**

Excess moisture trapped behind covering materials such as ceramic tiles, carpet, wall coverings etc can cause major problems. For instance, excess moisture behind ceramic tiles on drywall or other substrates can cause decay, delamination and mold growth. The longer these problems go undetected, the worse the problem can get, eventually leading to system failure.

Your **MRH** can be used to detect and identify areas of elevated moisture within or behind most types of wall and floor coverings. For example the **MRH** can detect elevated moisture behind most types of ceramic tiles.

Should the **Drywall Scale** prove to be too sensitive for testing ceramic tiles or other coverings, reduce sensitivity by choosing the **Laminate Scale** and take readings on a comparative basis.






## MRH III User Guide

### Laminate Scale

For applications where the Roof or Drywall scales are too sensitive and the Masonry scale is not sensitive enough, the Laminate scale can be used. This scale used can be used for testing on ceramic tiles and other wall and floor coverings. It can also be used in many other applications where the other scales do not have the required sensitivity.

### Wood Scale

#### Testing wood and wood products

- a) When testing wood, power-on, select Wood Scale using the  key.
- b) When the Wood Scale is selected the moisture content (MC) in percent is shown on the right-hand side of the bottom line of the display. The left-hand side of this line shows the specific gravity (SG) being used. *See note on specific gravity on page 23.* The SG is changed by using the  or  key to adjust to the required SG value. The range of SG covered is 0.30 to 0.80. The S.G. increases and decreases in increments of 0.01.
- c) A chart showing the approximate specific gravity of a range of different species is shown on pages 22 and 23. For SG greater than 0.80 please refer to specific gravity adjustment chart (Table 2 on page 20). For species not listed a more comprehensive list is available on the USDA website [www2.fpl.fs.fed.us/](http://www2.fpl.fs.fed.us/) (in the US) or from timber importers and forestry departments in other countries.
- d) If possible, always take readings with the length of the instrument parallel to the direction of the wood grain.
- e) Calibration tests were carried out by Forbairt, the Irish Institute for Industrial Research and Standards, and are based on Douglas Fir, which had a published specific gravity (SG) of 0.50.
- f) Acceptable levels of moisture content depend on climatic conditions and we advise you check the levels acceptable in your area. Table 1 on page 19 shows the

### **MRH III User Guide**

approximate relationship between the ambient relative humidity and equilibrium moisture content in woods.

- g) The following moisture content levels are given as a guide
- Furniture: 5% to 6% when used in locations of low relative humidity and up to 10% to 11% may be acceptable where the relative humidity is higher.
  - Interior wood: 6% in low humidity areas. Up to 12% in higher humidity locations.
  - Exterior wood: 10% to 15% depending on local humidity levels.
  - Generally, wood with a moisture content in excess of 23% - 25% is susceptible to rot.
  - Wood moisture content in excess of 18% - 20% may provide an environment for termite and wood-boring insects to thrive and multiply. Wood at these high levels can also support mold and biological growth.
  - Wood at 28% moisture content is considered to have reached fiber saturation point.
- h) Avoid taking readings on wood from the top of a stack stored outside as these may be affected by surface moisture from recent rain.
- i) When taking readings in chemically treated wood, it is advisable to allow for possible effects that the treatment may have on readings.

### **Relative humidity and moisture content**

The following table shows the approximate relationship between relative humidity (RH) and equilibrium moisture content (EMC) of some woods.

These figures are approximate values and may vary for different species.

## MRH III User Guide

Relative Humidity	Wood MC %
10%	3 to 5
20%	5 to 6
30%	6 to 8
40%	8 to 10
50%	10 to 11
60%	11 to 13
70%	13 to 15
80%	15 to 18
90%	18 to 23
100%	23 +

**Table 1. Approx. relationship between RH and EMC.**

### Depth of field penetration

Depending on the density of the material being tested, the instrument field can penetrate approximately 30mm (1 ¼ inches) below the surface. When testing thin materials such as wood veneers it is recommended that they are stacked to at least that thickness.

## Wood Flooring

- Excess moisture in wood flooring or concrete sub-floors can cause major problems. For instance, if installed with excess moisture, the wood can subsequently shrink leading to job failure.
- If a wood floor (solid, laminated or engineered) is installed above wet concrete the wood can absorb moisture emitting from the concrete causing the wood to swell and buckle and even cause structural damage to the building. For measuring the moisture in concrete, the Tramex CME4, CRH or CMEXpert should be used.
- Your **MRH** can be used to measure the moisture content of the wood floor to ensure it meets specification. Likewise it can be used to check, on a comparative basis, through the floor covering, to identify elevated moisture in the substrate.

## **MRH III User Guide**

**NOTE: On the Wood, Drywall, Roofing and Laminate Scales the depth of penetration of the MRH signal can be up to 1¼” (30mm). When using any of these scales on wood or laminate over concrete or other screeds, the MRH will be reading through the material and may be giving a much higher than expected reading. This is invariably due to the fact that concrete is a much denser material than wood or wood-based products. In such instances, the wetter areas can be identified non-invasively and the wood probe can then be used to make select intrusions to determine the moisture content of the wood or laminate.**

Reading S.G. set at 0.5	S.G.			
	0.85	0.9	0.95	1
	Adjustment.			
5 to 9	-3	-4	-4	-4
10 to 12	-4	-5	-5	-5
13 to 15	-5	-6	-6	-6
16 to 18	-6	-7	-7	-8
19 to 21	-7	-8	-9	-10
22 to 24	-9	-9	-11	-11
25 to 27	-11	-11	-12	-13
28 to 30	-12	-13	-13	-14
31 to 33	-14	-14	-14	-15
34 to 36	-15	-15	-15	-16

**Table 2. Specific Gravity Adjustment Table (S.G. > 0.80)**

## **MRH III User Guide**

### **Adhesives**

The presence of different species, treatments, adhesives, etc., within products such as plywood, particleboard, OSB (oriented strand board), laminated and engineered woods will affect measurements. If in doubt please contact us and, if you wish, we can work with you in developing your own calibration for a specific product.

### **Concrete.**

Your **MRH** is not calibrated for concrete. The **Tramex Concrete Encounter CME4**, **CMExpert** and **CRH** instruments are specifically designed for concrete flooring and are recommended where quantitative measurements are required. However a comparative indication of the moisture condition of a concrete or sub floor can be obtained with the **MRH** set on the Masonry scale. **Comparative** readings can also be obtained through coverings such as vinyl, carpet and laminated wood flooring by using the Laminate Scale.

### **Chemical treatment or contamination**

Readings may be affected by certain flame-retardants, preservatives, aluminium paint and by contamination by salt water. Treat all readings on such wood as indicative readings only.

## MRH III User Guide

### Table of Wood Specific Gravities (S.G.)

#### HARDWOODS

Am. = American

**Alder, Red** (Am. Alder, Western Alder) *Alnus rubra* 0.41

**Ash, White** (Northern / Southern Ash) *F. americana* 0.60

**Aspen, Quaking** (Am. Aspen) *Populus tremuloides* 0.38

**Basswood** (Am. Basswood, Linden) *Tilia americana* 0.37

**Beech** *Fagus Grandifolia* 0.64

**Birch, Yellow** (Gray, Silver, Swamp) *B. alleghaniensis* 0.62

**Cherry** (Am. Black Cherry) *Prunus serotina* 0.50

**Cottonwood** (Eastern Cottonwood) *Populus deltoides* 0.40

**Elm, Red** (Slippery elm) *Ulmus rubra* 0.53

**Hackberry** (Common Hackberry) *Celtic occidentalis* 0.53

**Hickory** (Pignut, True Hickory) *Carya glabra* 0.75

**Maple, Am. Hard** (Sugar Maple) *Acer saccharum* 0.63

**Maple Am. Soft** (Red Maple) *Acer rubrum* 0.54

**Maple, Silver** *Acer saccharinum* 0.47

**Maple, Black** *Acer nigrum* 0.57

**Oak, Northern Red** *Quercus rubra* 0.63

**Oak, Southern Red** (Cherrybark) *Quercus falcata* 0.68

**Oak, White** (Am. White Oak) *Quercus alba* 0.68

**Pecan Hickory** (Am. Pecan) *CaryaiIllinoensis* 0.66

**Red Gum** (Sweetgum) *Liquidamber styraciflua* 0.52

**Sassafras** (Golden Elm) *Sassafras albidum* 0.46

**Sycamore**(Am. Planetree, Buttonwood) *P. occidentalis* 0.49

**Walnut, Black** (Am. Walnut) *Juglans nigra* 0.55

**Willow, black** (Am. Willow) *Salix nigra* 0.39

**Yellow Poplar** (Am. Tulipwood, Tulip Poplar, Canarywood)

*Liriodendron tulipifera* 0.42

#### SOFTWOODS

**Cedar, Alaska** (Alaskan Yellow) 0.44

## **MRH III User Guide**

<b>Cedar, Incense</b>	0.37
<b>Cedar, Port-Orford</b>	0.43
<b>Cedar, Western Red</b>	0.32
<b>Douglas Fir, Coast</b>	0.48
<b>Douglas Fir, Interior West</b>	0.50
<b>Fir, California Red</b>	0.38
<b>Fir, Grand</b>	0.37
<b>Fir, noble</b>	0.39
<b>Fir, Pacific Silver</b>	0.43
<b>Fir, White</b>	0.39
<b>Hemlock, Western</b>	0.45
<b>Larch, Western</b>	0.52
<b>Pine, Lodgepole</b>	0.41
<b>Pine, Ponderosa</b>	0.40
<b>Pine, Sugar</b>	0.36
<b>Pine, Western White (Idaho)</b>	0.38
<b>Spruce, Engelmann</b>	0.35
<b>Spruce, Sitka</b>	0.40

### **EXOTIC**

<b>Balsa</b>	0.16
<b>Ebony</b>	1.10
<b>Karri</b>	0.82
<b>Padauk</b>	0.77
<b>Tulipwood</b>	0.96

Source: USDA: Wood Handbook 1987.

#### ***Note on specific gravity (S.G.):***

**The specific gravity (S.G.) of wood is the ratio of the density of wood to the density of water at a specified temperature (generally 4°C where the density of water is at its maximum). The density of wood is usually based on the oven-dry weight and the volume at the specified moisture content (M.C.), generally 12%.**

## ***MRH III User Guide***

### ***Wood Pin Meter Mode***

#### **Factors Affecting Moisture Readings**

The readings of all moisture meters are influenced by the characteristics of different species of wood as well as temperature and other factors listed below.

#### **Species**

Different species of wood can vary in density and conductivity, which can have an effect on the electrical resistance of the wood. This can influence meter readings for the same moisture content and can also apply to similar species from different origins. A species adjustment table is provided on page 28 to 39.

#### **Temperature**

Meter readings can be affected by wood temperature. The Wood Probe is calibrated at 20°C (68°F). At wood temperatures above 20°C (68°F), the meter readings are higher and at wood temperatures below 20°C (68°F) the meter readings are lower. A temperature adjustment chart is provided on page 27.

#### **Chemical treatment or contamination**

Readings may be affected by certain flame retardants, preservatives, aluminium paint and by contamination by salt water. Treat all readings on such wood as indicative readings only.

#### **Surface Moisture**

Surface moisture due to wetting or condensation can affect readings when uninsulated pins are used. It is recommended that insulated pins such as SP-52 are used in conjunction with HA-22 Hammer Action electrode. As the pins are




## **MRH III User Guide**

driven into the wood, readings can be taken at different depths unaffected by moisture on the surface.

### **Wood Flooring**

- a) Excess moisture in wood flooring can cause major problems.
- b) For instance, if installed with excess moisture, the wood can subsequently shrink leading to job failure.
- c) If a wood floor (solid, laminated or engineered) is installed above wet concrete the wood can absorb moisture emitting from the concrete causing the wood to swell and buckle and even cause structural damage to the building.
- d) Your **MRH** in **PIN Probe** mode can be used to measure the moisture content of the wood floor to ensure it meets specification.

### **Testing wood and wood products**

- a) When testing wood, power-on, insert wood probe into phono-socket at the top of the **MRH** and select Pin Probe Mode using the  key.
- b) When a wood probe is inserted the moisture content (MC) in percent is shown on the right-hand side of the bottom line of the display.
- c) If possible, always take readings with the pins parallel to the direction of the wood grain.
- d) Calibration tests are based on Douglas fir, which has a published specific gravity (SG) of 0.50.
- e) Acceptable levels of moisture content depend on climatic conditions and we advise you check the levels acceptable in your area. Table 1 on page 19 shows the approximate relationship between the ambient relative humidity and equilibrium moisture content in woods.

### ***MRH III User Guide***

- f) The following moisture content levels are often quoted in the wood industry and should be used as a guide only. Please contact industry associations and manufacturers for their specifications.
- Furniture: 5% to 6% when used in locations of low relative humidity and up to 10% to 11% may be acceptable where the relative humidity is higher.
  - Interior wood: 6% in low humidity areas. Up to 12% in higher humidity locations.
  - Exterior wood: 10% to 15% depending on local humidity levels.
  - Generally, wood with moisture content in excess of 23% - 25% is susceptible to rot.
  - Wood moisture content in excess of 18% to 20% may provide an environment for termite and wood-boring insects to thrive and multiply. Wood at these high levels can also support mold and biological growth.
  - Wood at 28% moisture content is considered to have reached fiber saturation point.
- g) Avoid taking readings on wood from the top of a stack stored outside as these may be affected by surface moisture from recent rain.
- h) When taking readings in chemically treated wood, it is advisable to allow for possible effects that the treatment may have on readings.

### **Temperature Adjustment Chart**

The Pin Probe has been calibrated on wood at an ambient temperature of 20°C (68°F). When measuring moisture in wood at a different temperature, the following temperature adjustment needs to be applied. (Figures rounded to the nearest whole number).

## MRH III User Guide

### Temperature Adjustment Chart

For use in pin-meter mode only

The Instrument has been calibrated on wood at an ambient temperature of 20°C (68°F). When measuring moisture in wood at a different temperature, the following temperature adjustment needs to be applied. (Figures rounded to the nearest whole number).

Wood temperature		Meter reading						
°C	°F	7%	10%	12%	15%	20%	26%	30%
		Adjustment						
5	40	+1	+2	+2	+3	+4	+5	+7
10	50	+0	+1	+1	+2	+2	+3	+4
20	68	+0	+0	+0	+0	+0	+0	+0
30	80	+0	-1	-1	-1	-1	-2	-2
40	100	-1	-2	-2	-3	-3	-3	-4
50	122	-1	-3	-3	-4	-5	-7	-8
60	140	-2	-3	-4	-5	-6	-8	-10
70	158	-3	-4	-5	-6	-8	-10	-12

#### Example 1:

**If meter reads 15% and temperature of wood is 10°C (50°F), actual moisture content is 17%. i.e. 15%+2%=17%**

#### Example 2:

If meter reads 15% and temperature of wood is 50°C (122°F), the actual moisture content is 11%. i.e. 15%-4%=11%

### Combined Species/Temperature Correction

#### Example 1

If meter gives reading 15% on a sample of Sitka Spruce and the wood temperature is 40°C, the correction is as follows:

Species correction @15% = 16%

Temperature correction @ 40°C = - 3%

Corrected reading: 13%

#### Example 2

If meter gives reading 24% on sample of Teak and the wood temperature is 10°C, the correction is as follows:

Species correction @24% = 20%

Temperature correction @ 10°C = + 2%

Corrected reading: 22%

**SPECIES CORRECTION CHART**

Meter reading (% moisture content)	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Species	Correct moisture content																		
Alder, brown	9	10	10	11	12	13	13	14	15	15	16	17	18	18	19	20	21	20	21
Amberoi	7	7	8	9	9	10	11	12	12	13	14	14	15	16	17	17	18	19	19
Ash, alpine	9	10	11	12	13	14	15	16	17	18	18	19	20	21	22	23	24	25	25
Ash, American	9	10	11	11	12	13	14	14	15	16	17	18	19	20	21	23	24	25	25
Ash, Crow's	9	10	10	11	12	12	12	14	14	15	16	17	17	18	19	20	20	21	21
Ash, European	8	9	10	11	12	12	13	14	14	15	16	17	18	18	19	20	21	21	21
Ash, mountain	9	10	11	12	13	14	15	16	17	18	18	19	20	21	22	23	24	25	25
Ash, silvertop	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	22
Balsa	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	24
Baltic, red	9	10	11	12	13	14	15	15	16	17	18	18	19	20	21	22	23	24	24
Baltic, white	9	10	11	12	13	14	15	16	17	18	19	20	22	23	24	25	26	27	27
Bauvudi	7	8	9	9	10	11	11	12	13	13	14	15	15	16	17	17	18	18	18
Bean, black	9	10	11	12	13	14	15	16	16	17	18	19	20	21	22	23	24	25	25
Beech, American	7	8	10	11	12	13	14	15	16	13	18	19	20	21	23	23	24	25	25
Beech, Japan	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	25
Beech, myrtle	8	9	10	11	11	12	13	14	14	15	16	17	18	18	19	20	21	22	22

# MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Beech, silver	9	10	10	11	12	12	13	13	14	14	15	16	16	17	17	18	19	19	
Beech, Wau	9	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	
Beech, white	8	9	10	11	12	13	14	14	15	16	17	18	19	19	20	21	22	23	
Birch, European	7	8	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Birch, white	9	10	11	12	12	13	14	15	15	16	17	18	18	19	20	21	22	22	
Blackbutt	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Blackbutt, WA	9	10	11	12	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Blackwood	9	9	10	11	12	12	13	14	15	16	16	17	18	19	20	20	21	22	
Bloodwood, red	10	10	11	12	13	14	15	15	16	17	18	19	19	20	21	22	23	23	
Bollywood	7	8	9	10	11	12	12	13	14	15	16	16	17	18	19	20	21	22	
Box, brush	7	7	8	8	9	9	10	10	11	11	12	13	13	14	14	15	15	16	
Box, grey	10	11	12	12	13	14	14	15	16	17	17	18	19	20	20	21	22	23	
Box, grey, coast	9	10	11	11	12	13	14	14	15	16	17	18	18	19	20	21	22	22	
Box, kanuka	8	9	10	11	12	12	13	14	15	16	16	17	18	19	20	20	21	22	
Brownbarrel	7	8	9	10	11	12	12	13	14	15	16	17	18	18	19	20	21	22	

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Buchania	6	7	8	9	10	10	11	12	13	14	14	15	16	17	18	19	19	20	
Candlenut	5	8	10	12	14	16	18	21	23	25	27	29	31	34	36	38	40	42	
Carabeen, yellow	8	9	9	10	11	12	12	13	14	14	15	16	16	17	18	18	19	20	
Cedar, red	9	10	11	12	13	14	16	17	18	19	20	21	22	23	25	26	27	27	
Cedar, red, western	7	9	10	11	12	13	13	14	15	17	18	19	20	21	22	23	24	25	
Cedar, South American	9	10	11	12	13	13	14	15	16	17	17	18	19	20	21	22	22	23	
Cherry	7	8	9	11	12	13	14	15	16	17	18	18	20	21	22	23	21	25	
Cherry, Brazilian	7	8	9	11	12	13	14	15	16	17	18	18	20	21	22	23	21	25	
Coachwood	6	7	8	9	10	11	12	13	14	14	15	16	17	18	19	20	21	22	
Dakua salusalu	9	10	11	11	12	13	14	15	16	17	18	19	19	20	21	22	23	24	
Douglas Fir	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Elm	6	7	7	8	9	10	12	13	13	14	15	15	16	17	18	19	20	20	
Erima	8	8	9	10	11	12	12	13	14	15	15	16	17	18	19	19	20	21	
Fir, Alpine	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Fir, amabilis	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Fir, red	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	25	26	

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
<i>Species</i>	<i>Correct moisture content</i>																			
Fir, white	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	25	26		
Gum, blue, southern	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24				
Gum, blue Tasmanian	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24			
Gum, grey	8	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
Gum, grey, mountain	9	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23				
Gum, lemon-scented	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Gum, Maiden's	10	11	11	12	13	14	15	16	17	18	19	20	20	20	21	22	23	24		
Gum, manna	7	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	21			
Gum, mountain	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23		
Gum, American, red	10	11	12	12	13	14	15	16	17	18	19	20	21	22	23	24	24			
Gum, red, river	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27		
Gum, rose	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24				
Gum, shining	8	9	10	11	11	12	13	14	15	16	17	18	19	20	20	21	22	23		
Gum, yellow	9	10	11	12	12	13	14	15	16	17	18	19	20	21	21	21	21	22		

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
<i>Species</i>	<i>Correct moisture content</i>																			
Hemlock, western	8	9	10	11	12	13	15	16	17	18	19	20	21	22	23	24	26	27		
Hickory	-	7	9	11	13	14	16	17	18	20	21	22	24	-	-	-	-	-	-	
Iroko	7	7	8	9	10	11	12	13	14	15	15	16	17	18	19	19	20	21		
Ironbark, red	11	12	12	13	14	15	16	16	17	18	19	20	21	22	22	22	23	24	24	
Ironbark, red, broad-leaved	11	12	12	13	14	15	16	16	17	18	19	20	21	22	22	22	23	24	25	
Ironbark, red, narrow-leaved	8	9	10	11	12	13	14	14	15	16	17	18	19	20	21	22	23	24		
Jarrah	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25		
Jelutong	8	9	10	11	12	12	13	14	15	16	16	17	18	19	20	21	21	22		
Kamarere (PGN source)	8	9	10	10	11	12	13	14	15	16	17	18	19	19	20	21	22	23		
Kamarere (Fiji source)	7	8	8	9	10	11	11	12	13	13	14	15	15	16	17	17	18	19		
Kapur	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
Karri	7	8	9	10	11	12	13	13	14	15	16	17	18	18	19	20	21	22		
Kauri, Qld	10	11	12	13	14	15	16	16	17	18	19	20	21	22	23	24	24	25		
Kauri, NZ	9	10	10	11	12	12	13	13	14	14	15	16	16	17	17	18	18	19		
Kauri, Vanikoro	11	12	13	13	14	14	15	15	16	16	17	17	18	18	18	18	19	19		



## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Kempas	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Laran	8	8	9	10	11	11	12	13	14	15	16	17	18	19	20	21	22	23	
Larch, European	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Lodgepole Pine	7	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Lumbayau	8	9	10	11	12	12	13	14	15	16	17	18	19	20	21	22	23	24	
Mahogany, African	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	
Mahogany, American	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Mahogany, Brazilian	-	-	-	10	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mahogany, brush	8	9	10	10	11	11	12	12	13	14	15	16	17	18	19	20	21	22	
Mahogany, miva	10	11	12	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Mahogany, red	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	
Mahogany, rose	9	10	10	11	12	12	13	14	15	16	17	18	19	20	21	22	23	24	
Mahogany, santos	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Mahogany, southern	8	9	10	11	12	12	13	14	15	16	17	18	19	20	21	22	23	24	
Mahogany, Honduras	7	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mahogany, white	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Makoré	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Malas	7	8	9	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Maple, Canadian	7	8	9	10	11	12	13	14	15	16	17	18	18	20	21	22	23	24	24
Maple, Qld	10	10	11	12	13	14	15	16	17	18	18	19	20	21	22	23	24	24	24
Maple, rose	8	8	9	10	10	11	12	12	13	14	14	15	16	16	17	18	18	19	19
Maple, sugar	7	7	8	10	12	13	14	15	16	17	18	19	20	21	22	23	24	-	-
Mararie	10	11	11	12	13	14	14	15	16	17	18	18	19	20	21	21	22	23	23
Marri	7	8	9	9	10	11	11	12	13	13	14	15	15	16	17	17	18	19	19
Matai	9	9	10	11	12	12	13	14	15	16	16	17	18	18	19	20	21	22	22
Meranti	7	8	9	10	11	12	13	14	13	16	17	18	19	20	21	22	23	24	24
Messmate	10	11	12	12	13	14	15	16	16	17	18	18	19	20	21	22	22	23	23
Nutmeg (Fiji source)	7	8	9	10	11	11	12	13	14	14	15	16	17	18	18	19	20	21	21
Oak, American red	7	8	9	11	12	13	14	15	16	17	18	18	20	21	22	23	21	25	25
Oak, European	7	8	9	10	11	12	13	14	15	16	17	18	19	21	22	23	24	25	25
Oak, New Guinea	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	24
Oak, silky, northern	8	8	9	10	11	12	13	14	15	16	17	17	18	19	20	21	22	23	23
Oak, silky, red	8	9	9	10	11	11	12	13	13	14	15	16	16	17	18	18	19	20	20
Oak, silky, southern	7	10	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	25
Oak, tulip, blush	7	11	12	12	13	14	15	16	16	17	18	19	20	21	22	23	24	25	25

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Oak, tulip, brown	10	11	12	12	13	13	14	14	15	16	16	17	18	18	19	19	20	20	20
Oak, tulip, red	11	12	13	14	15	16	17	18	18	19	20	21	22	23	24	25	25	26	26
Oak, white	6	7	8	9	10	11	12	13	14	15	16	17	18	18	19	20	21	21	22
Obeche	7	8	9	10	10	1	12	13	14	15	15	16	16	17	18	18	19	20	20
Padauk, African	7	7	8	9	10	11	12	13	14	15	15	16	17	18	19	19	20	21	21
Peppermint, broad-leaved	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	26
Peppermint, narrow-leaved	10	11	11	12	13	14	14	15	16	17	18	18	19	20	21	22	22	23	23
Persimmon	7	8	9	10	10	11	12	13	14	15	15	16	16	17	18	18	19	20	20
Pine, bunya	10	11	12	12	13	14	14	15	16	16	17	18	18	19	20	21	21	22	22
Pine, Corsican	9	10	11	12	13	14	15	16	17	18	19	20	22	23	24	25	26	27	27
Pine, cypress, white	9	10	11	11	12	13	14	15	17	17	18	19	20	21	22	22	23	24	24
Pine, hoop	10	11	11	12	13	14	15	16	17	17	18	19	20	21	22	22	23	24	24
Pine, Huon	10	10	12	12	13	13	14	15	15	16	17	18	18	19	20	20	21	22	22
Pine, King William	9	9	11	12	12	13	14	14	15	16	16	17	18	18	19	20	20	21	21

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Pine, klinki	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Pine, longleaf	9	10	11	12	13	14	15	16	17	18	19	20	22	23	24	25	26	27	
Pine, lodgerpole	7	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Pine, maritime	10	11	12	12	13	14	15	15	16	17	18	18	19	20	21	21	22	23	
Pine, white, NZ	-	-	-	11	12	12	13	14	15	16	16	17	18	19	19	20	21	22	
Pine, Parana	7	8	9	10	11	12	13	14	15	16	16	17	18	19	20	21	22	23	
Pine, ponderosa	7	9	10	11	13	14	15	16	17	18	19	20	21	22	22	23	24	25	
Pine, radiata	10	11	11	12	13	14	15	16	17	18	19	20	21	22	24	25	26	27	
Pine, scots/shortleaf	7	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Pine, slash	8	9	10	11	12	13	14	15	16	17	17	18	19	20	21	22	23	24	
Pine, sugar	8	9	10	11	12	13	14	15	16	17	18	20	21	22	23	24	25	26	
Pine, white, western	-	8	9	10	11	11	12	13	14	15	16	17	17	18	19	20	21	22	
Poplar	7	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Quandong, silver	7	8	9	10	10	11	12	12	13	14	14	15	16	16	17	18	18	19	
Redwood	9	9	10	11	12	13	14	15	16	16	17	18	19	20	20	21	22	23	

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Redwood, European	7	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Rosewood, Patagonian	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Rosewood, Tiete	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Rosarosa	8	9	10	10	11	12	13	13	14	15	15	16	17	18	18	19	-	-	
Sapele	9	10	11	12	13	14	15	16	17	18	19	20	22	23	24	25	26	27	
Sassafras	8	9	10	10	11	12	13	13	14	15	16	16	17	18	18	19	20	21	
Sassafras, southern	9	10	11	11	12	13	13	14	15	15	16	17	17	18	19	19	20	21	
Satinash, grey	8	9	9	10	11	12	13	14	15	16	16	17	18	19	20	21	22	23	
Satinash, New Guinea	7	8	8	9	10	11	11	12	13	13	14	15	16	16	17	18	19	19	
Satinash, rose	7	7	8	8	9	10	10	11	12	12	13	13	14	15	16	16	-	-	
Satinay	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Satinheart, green	9	10	10	11	11	12	12	13	13	14	14	15	15	16	16	17	-	-	
Sepetir	8	9	10	12	13	14	15	16	17	18	20	21	22	23	24	25	26	27	
Sheoak, river	8	9	10	10	11	11	12	12	13	14	14	15	16	16	17	17	18	-	
Sheoak, rose	9	10	11	11	12	13	13	14	14	15	15	16	16	17	18	18	19	19	
Sheoak, WA	9	10	11	11	12	12	13	14	14	15	16	16	17	18	18	19	20	20	
Silkwood, bolly	9	10	11	11	12	12	13	13	14	14	15	15	16	16	17	17	18	18	

## MRH III User Guide

<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Silkwood, red	6	7	7	8	9	10	10	11	12	12	13	14	14	15	16	17	17	18	18
Silkwood, silver	9	10	11	12	12	13	14	15	15	16	17	18	18	19	20	20	21	22	22
Spruce, Sitka	7	8	9	11	11	12	13	15	16	17	18	19	20	21	22	23	25	26	26
Spruce, western white	7	8	10	11	12	13	14	15	16	17	18	19	20	21	21	23	24	25	25
Stringybark, brown	9	10	11	11	12	13	14	15	16	17	18	19	19	20	21	22	23	24	24
Stringybark, Darwin	8	8	9	10	11	12	13	14	15	15	16	17	18	19	20	21	22	22	22
Stringybark, yellow	11	12	13	14	14	15	16	17	18	18	19	20	21	21	22	23	24	24	24
Sycamore	7	7	8	9	10	11	12	13	14	15	15	16	17	18	19	19	20	21	21
Sycamore, satin	9	9	10	11	11	12	12	13	14	14	15	16	16	17	18	18	19	20	20
Sycamore, silver	9	10	10	11	12	12	13	13	14	14	15	16	16	17	17	18	19	19	19
Tallowwood	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	24
Tawa	9	10	10	11	11	12	12	13	13	14	14	15	15	16	16	17	17	18	18
Teak, Brazilian	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	26
Teak	7	7	8	9	10	11	12	13	14	14	15	15	16	16	17	18	19	20	20
Tigerwood	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	27
Tingle, red	9	10	11	12	13	15	16	17	18	19	21	22	23	24	25	27	28	29	29
Tingle, yellow	9	10	11	12	13	14	15	17	18	19	20	21	22	23	25	26	27	28	28

## MRH III User Guide



<i>Meter reading (% moisture content)</i>	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
<i>Species</i>	<i>Correct moisture content</i>																		
Totara	8	9	10	10	11	12	12	13	14	14	15	16	16	17	18	18	19	19	
Touriga, red	11	11	12	13	14	14	15	16	17	17	18	19	20	20	21	22	23	23	
Tuart	9	10	11	12	12	13	14	15	15	16	17	17	18	19	20	20	21	22	
Turpentine	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	24	
Vitex, New Guinea	8	8	9	10	11	12	13	13	14	15	16	17	18	18	19	20	21	22	
Walnut, African	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	
Walnut, American Black	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Walnut, Brazilian	8	9	10	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Walnut, blush	10	11	11	12	12	13	14	14	15	16	16	17	18	18	19	19	20	21	
Walnut, European	9	10	11	12	13	14	15	16	17	18	19	20	22	23	24	25	26	27	
Walnut, New Guinea	7	8	9	10	11	12	13	14	15	16	17	17	18	19	20	-	-	-	
Walnut, Peruvian	7	8	9	11	12	13	14	15	16	17	18	18	20	21	22	23	21	25	
Walnut, Qld	9	10	11	12	13	14	15	16	17	18	19	20	22	23	24	25	25	27	
Walnut, yellow	7	8	8	9	10	10	11	12	12	13	14	14	15	16	17	17	18	19	
Wandoo	10	11	12	13	14	15	16	16	17	18	19	20	21	22	23	24	25	25	
Wattle, hycory	8	9	10	11	11	12	13	13	14	14	15	16	16	17	18	18	19	20	
Wattle, silver	9	10	10	11	12	13	13	14	15	16	16	17	18	19	20	20	21	22	
Western Hemlock	7	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Western red spruce	7	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Wollybutt	10	10	11	12	13	14	15	15	16	17	18	19	20	20	21	22	23	24	

## **MRH III User Guide**

### **RH Probe**

The RH Probe utilises “state of the art” electronic technology to provide an “easy to use” and accurate method for measuring relative humidity, mixing ratio, temperature and dew point in a wide range of applications such as:-

- Heating, ventilation and air conditioning (HVAC) systems.
- Environmental and building monitoring.
- Building inspection.
- Flooring (including ASTM F 2170 In Situ & ASTM F 2420 RH Hood methods)

A typical MRH display with the RH Probe attached is shown on page 13. Pressing the   on the instrument changes the temperature readings from °C to °F, the mixing ratio from g/kg (gms) to Grains/Lb (GRN) or vice-versa.

**NOTE: When performing Humidity tests on Concrete Flooring it should be noted that:**

A): If artificial aids for accelerated drying of concrete are being used it is recommended that they be turned off at least four days before taking final readings.

B): It is important that the installer ensures that the floor covering is applied at the moisture content and or relative humidity specified by the manufacturer of the floor coverings and/or adhesives.

C): It is very important that RH probes are handled with care and protected from harsh environments in order to maintain their long-term stability. It is recommended that you do not insert the RH probe into concrete until the chemical reaction between the cement and water has taken place and the drying process has begun. To achieve this it is recommended that you do not insert the probe into the hole in the concrete until the moisture content of the concrete has dropped below 5% when measured with a **Tramex CME4, Tramex CRH or Tramex CMEX**. RH probes should not be left enclosed



## MRH III User Guide


in concrete or similar environments at an RH level greater than 93% for long periods, in these situations it is recommended to remove the RH probe and allow the test area to continue to acclimatise by replacing the stopper in the hole-liner sleeve.

### Calibration checking of RH Probe

Each RH probe is factory calibrated using precision equipment traceable to NIST standards. With reasonable care in use and storage, RH probe measurements should remain within the  $\pm 3\%$  specification. RH probe accuracy can be degraded by exposure to polluted atmospheres such as dust, aggressive chemical vapors, or contaminated wetting. It is thus advisable to periodically check the RH Probe accuracy by using RH 75 or a similar suitable reference kit. These kits contain a saturated Sodium Chloride salt solution that creates a nominal 75% relative humidity within the measuring cell. The precise relative humidity is temperature dependent. The RH 75 calibration check is available from the manufacturer or the supplier of your **MRH** meter.

To carry out a calibration check:-

1. Remove cell from sealed plastic bag.
2. Remove white stopper plug from cell.
3. Insert plastic calibration sleeve into cell as shown in photo on left.
4. Remove sleeve stopper plug and fully insert RH probe.
5. Place cell/probe in a stable, draft free, temperature environment, e.g., inside a desk drawer, and leave for at least 2 hours.
6. After 2 hours, connect probe to MRH and measure RH value.
7. The RH reading should be  $75\% \pm 3\%$
8. If the value is outside this range, repeat the test after a further 2 hours.
9. If the RH value is still outside specification, return the RH probe to Tramex for investigation.
10. When the calibration check test has been completed, remove RH probe and sleeve from cell.  
Fit white stopper plug into cell and seal cell inside the plastic bag.

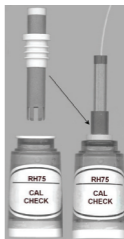

### Calibration

For regular on-site assessment of your **MRH in moisture measurement mode**, a calibration-check box is available from the suppliers of your **MRH**. Should it be found that readings are outside the set tolerances, it is recommended that the **MRH** be returned for re-calibration. Calibration

## ***MRH III User Guide***

adjustments should not be carried out by anyone other than Tramex or their authorised service provider who will issue a calibration certificate on completion.

Requirements for quality management and validation procedures, such as ISO 9001:2008, have increased the need for regulation and verification of measuring and test instruments. It is therefore recommended that calibration of the **MRH** should be checked and certified in accordance with the standards and/or protocols laid down by your industry (usually on an annual basis) by an authorized test provider. The name of your nearest test provider and estimate of cost is available on request.

### **Limitations**

The **MRH** will not detect or measure moisture through any electrically conductive materials including metal sheeting or cladding, black EPDM rubber or wet surfaces.

### **Warranty**

Tramex warrants that this instrument will be free from defects and faulty workmanship for a period of one year from date of first purchase.

If a fault develops during the warranty period, Tramex will, at its absolute discretion, either repair the defective product without charge for the parts and labour, or will provide a replacement in exchange for the defective product returned to Tramex Ltd.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care.

In no event shall Tramex, its agents or distributors be liable to the customer or any other person, company or organisation for any special, indirect, or consequential loss or damage of any type whatsoever (including, without limitation, loss of business, revenue, profits, data, savings or goodwill), whether occasioned by the act, breach, omission, default, or negligence of Tramex Ltd., whether or not

## ***MRH III User Guide***

foreseeable, arising howsoever out of or in connection with the sale of this product including arising out of breach of contract, tort, misrepresentation or arising from statute or indemnity.

Without prejudice to the above, all other warranties, representations and conditions whether made orally or implied by circumstances, custom, contract, equity, statute or common law are hereby excluded, including all terms implied by Section 13, 14 and 15 of the Sale of Goods Act 1893.

### **Warranty claims**

A defective product should be returned shipping pre paid, with full description of defect to your supplier or Tramex at address shown below.

### **Product development**

It is the policy of Tramex to continually improve and update all its products.

We therefore reserve the right to alter the specification or design of this instrument without prior notice.

## ***MRH III User Guide***

**Tramex Limited  
Shankill Business Centre  
Shankill  
Co. Dublin  
Ireland**

**Tel: +353 1 239 3224  
Fax: +353 1 282 7880**

**Email: [sales@tramex.ie](mailto:sales@tramex.ie)  
Web Site: [www.tramex.ie](http://www.tramex.ie)**

**USA and Canada Tramex  
c/o Black Hawk Sales Inc.  
28 Pin Oak Drive  
Littleton  
CO 80127**

**Tel: 303 972 7926  
Fax: 303 972 7106**

**Email: [sales@tramexltd.com](mailto:sales@tramexltd.com)  
Web Site: [www.tramexltd.com](http://www.tramexltd.com)**

**U.K. Tramex Ltd.,  
Tel: 0870 735 2870**